


## Tp Link TL-R470T+ router uden wifi.

Opsætning for fibernet, i VLAN rubrikken skal der oprettes en ny ID: 101


Login på routeren og klik på VLAN under Network:

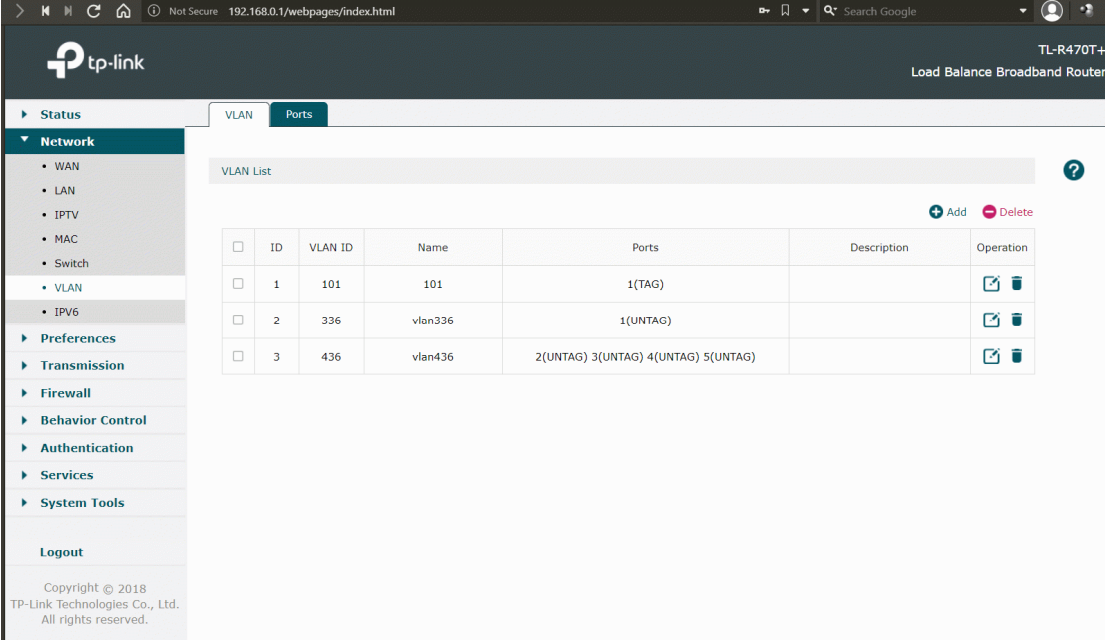

The screenshot shows the TP-Link web interface for a TL-R470T+ router. The 'Network' menu is expanded, and the 'VLAN' option is selected. The 'VLAN List' table is visible, showing three existing VLANs:

ID	VLAN ID	Name	Ports	Description	Operation
1	101	101	1(TAG)		[Edit] [Delete]
2	336	vlan336	1(UNTAG)		[Edit] [Delete]
3	436	vlan436	2(UNTAG) 3(UNTAG) 4(UNTAG) 5(UNTAG)		[Edit] [Delete]

Klik på Add og et nyt vindue kommer op, udfyld som vist og klik på OK:

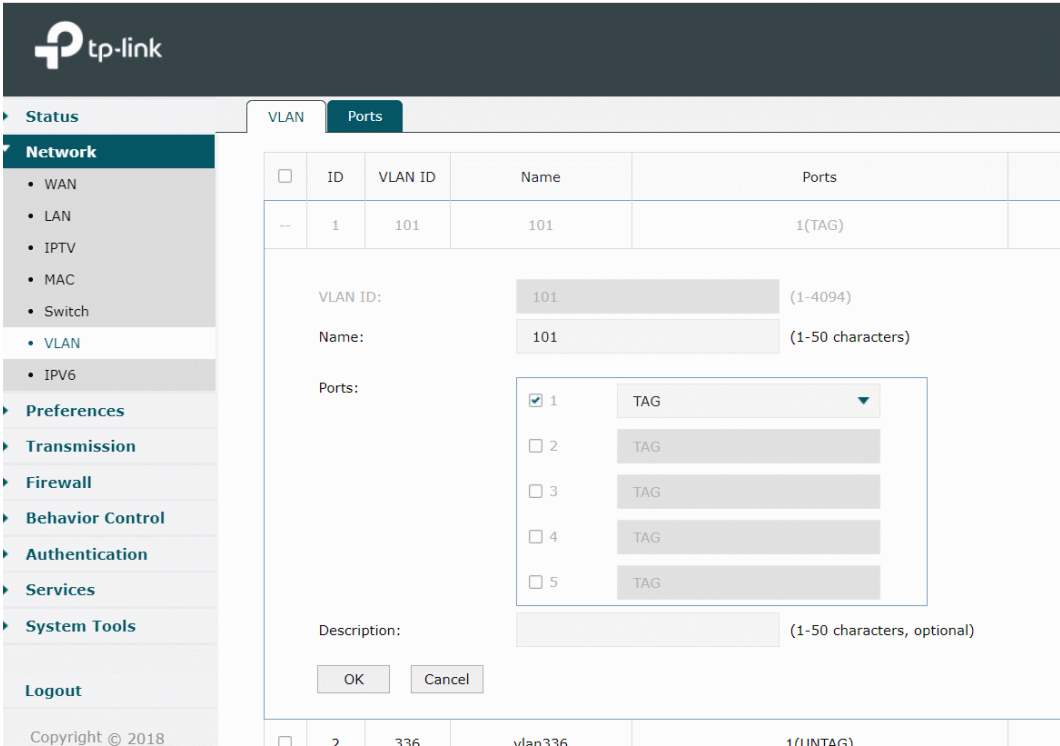

The screenshot shows the 'Add' dialog box for creating a new VLAN. The fields are filled with the following information:

- VLAN ID: 101 (range: 1-4094)
- Name: 101 (range: 1-50 characters)
- Ports: Port 1 is selected and set to TAG. Ports 2, 3, 4, and 5 are unselected and set to TAG.
- Description: (range: 1-50 characters, optional)

Buttons for 'OK' and 'Cancel' are visible at the bottom of the dialog.

Så skulle opsætningen være klar, tryk på Logout for at afslutte.